



BARRIERS


Technician Protection Mobile Barrier

Assembly 076993


How to Adjust Up/Down Tension

The Technologist Protection X-ray Mobile Barrier can be easily raised and lowered by hand and stays in position thanks to the perfectly counter-balanced internal springs. Follow these instructions to tighten or loosen the up and down movement resistance.

1. Remove (4) screws to open gear box

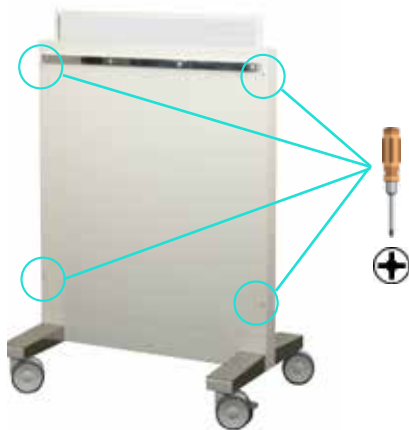

2. Locate (2) window springs

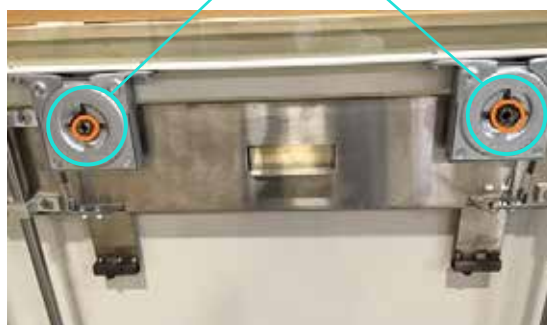

3. Tighten or loosen with ratchet



Ensure plastic sheaths on aluminum guides.

