



CURTAINS

# Curved Track for Lead Curtain

683690



#### End Stop

Bolt with horizontal pipe spacer to prevent carriers from traveling beyond desired location. For use with walk-along tracks.

#### Single Carrier

2 polyethylene wheels riveted to plated steel body with swivel hook.

Mill finish 6063-T5 extruded aluminum 5/8" wide x 1-11/16" high, 0094" thick.  
For curved track applications only.

**Each piece requires custom quoting.**

#### INCLUDES:

- 1 Curved Track
- 2 End Stops
- 1 Single Carrier for each grommet hole of curtain

#### OPTIONS:


- Clamp Hanger
- Ceiling Splice
- Ceiling Hanger
- Trim Chain

#### OPTIONS:




#### Trim Chain

3 links No. 10 single jack chain added to carriers to provide 3" of curtain height adjustment

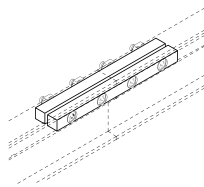


#### Splice

Steel plates align and lock track together. 1 pair pictured.

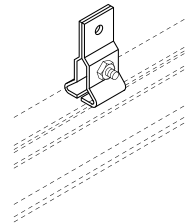

#### Clamp Hanger

Formed steel brackets clamp to track. Adjusts to any position. Suspend track with welded chain or wire rope. 1 pair pictured

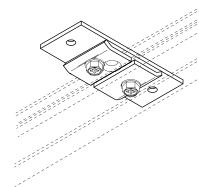

#### Ceiling Hanger

Steel plate mounts flush to ceiling. Track clamps to bracket with offset clips.